

QUICK USER TIPSFOR ROBOTIC POOL CLEANER CARE

AFTER EVERY USE:

- 1. LET THE CLEANER COOL OFF IN THE POOL FOR 30 MINIUTES.
- 2. UNTANGLE THE CORD.
- 3. EMPTY THE FILTER BAG.
- 4. REVERSE THE DIRECTION OF THE HANDLE (IF APPLICABLE).
- 5. STORE THE CLEANER ON THE CART.
- 6. INSPECT THE IMPELLER AND REMOVE DEBRIS.
- 7. REMOVE HAIR FROM BRUSHES AND/OR WHEELS.
- 8. DO NOT LEAVE THE CLEANER IN THE BOTTOM OF POOL FOR EXTENDED PERIODS OF TIME.
- 9. DO NOT USE THE CLEANER WHEN SHOCKING THE POOL.
- 10. HOSE OFF THE CLEANER WITH FRESH (NON-CLORINATED) WATER.
- 11. USE THE HANDLE TO REMOVE THE CLEANER FROM POOL, NOT THE CABLE.
- 12. DO NOT STORE THE CLEANER IN DIRECT SUN.
- 13. USE A TOWEL ON THE LIP OF THE POOL WHEN REMOVING THE CLEANER.
- 14. DISCONTINUE SALES OF CHEWING GUM IN ON-SITE VENDING MACHINES AND SNACK BARS.

LONG TERM STORAGE:

- 1. ROLL THE CLEANER ON TO ITS BACK AT THE END OF SEASON TO SAVE THE BRUSHES (IF APPLICABLE).
- 2. STORE THE CLEANER ON ITS CART IN A TEMPERATURE CONTROLLED ENVIRONMENT.
- 3. SAVE THE BOX FOR SHIPPING AND PART STORAGE.

NOTE: CONSULT YOUR CLEANERS OWNER'S MANUAL FOR SPECIFIC CARE & USE INSTRUCTIONS. DETAILED EXPLANATIONS OF EACH TIP IS AVAILABLE IN OUR BUYERS GUIDE.

copyright © 2014 GBPS, LLC